


vapour^{M2R}

FLOOR STEAM CLEANER WITH ULTRA DRY STEAM

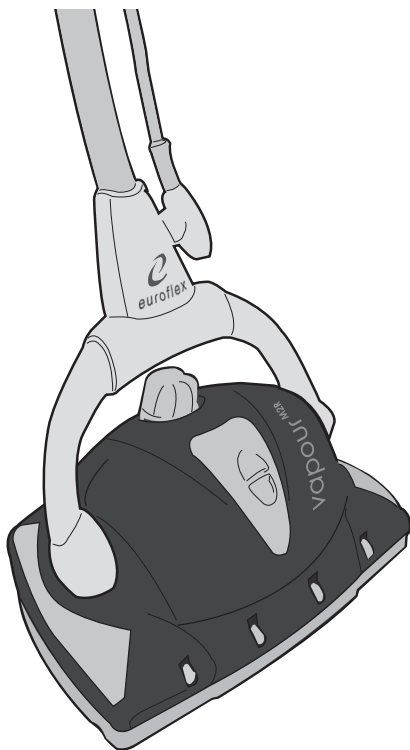

Floor Steam Cleaner with Frontal Steam Jet

INSTRUCTION MANUAL

Before using this product, please read the instructions and keep it for future references

IMPORTANT: SAVE THESE INSTRUCTIONS

SAFETY WARNING

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge unless they have been instructed to do so by a person responsible for their safety.
- Children should be cautioned that the steamer is not a toy and should not be played with.
- Keep the appliance out of reach of children when it is plugged in or cooling down.
- If the electrical cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- The steam released from the appliance is extremely hot. Both appliance and accessory tools may scald. Avoid direct contact. The steam symbol  warns operators that there is the risk of scalding!
- Never open the boiler cap while using the device.
- Unscrew the boiler cap only when the appliance is off, pressure-free, cooled and has the electrical cord disconnected.
- This appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

ETY INSTRUCTION

- Disconnect the appliance from the electrical outlet prior to any maintenance or cleaning operations. Always allow the appliance to completely cool down.
- Do not leave the appliance unattended while it is connected to the electrical outlet. Unplug the plug if you need to get away even just for a few minutes.

IMPORTANT NOTICES

- Do not direct the steam jet towards people, animals, or plants.
- Do not point the jet of steam in the direction of electrical or household appliances.
- Do not use the appliance with wet hands or bare feet.
- Do not use the appliance when close to flammable or explosive substances.
- Do not insert any object in the various openings and do not use the appliance if any opening is obstructed.
- Do not store the appliance outdoors.
- Do not expose the appliance to atmospheric agents, humidity, or heat sources.
- Use a dry or slightly damp cloth to clean this appliance.
- Only use accessories and spare parts recommended by the manufacturer.
- The manufacturer, importer or distributor assume no responsibility for damage to property or injury to persons, in the event that this appliance is damaged as a result of improper use or assembly.
- Repairs must be carried out exclusively by personnel authorized by the manufacturer. Appliance repaired by unauthorized personnel poses a danger to the user and voids the warranty.
- Do not pull on the electrical cord. Do not use the cord to move the appliance. Do not crush the cord by closing the door. Avoid any contact with sharp edges and corners. Keep the cord away from hot surfaces.
- The manufacturer reserves the right to make changes to the design and features of the appliance without notice.

IMPORTANT SAF

ATTENTION! This appliance is equipped with a 3-prong grounded power cord. Insert only into a 3-prong grounded electrical outlet. Do not try to remove the contacts of the grounded connection.

- This appliance is intended for **domestic use only**.
- Connect the appliance only after making sure that the voltage of the electrical outlet corresponds to that indicated on the plate of the appliance.
- Do not immerse the Steam Cleaner in water or other liquids. Always turn off and unplug appliance when filling with water.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
- Do not use with any opening blocked.
- Follow all labels and marking instructions on Steam Cleaner.
- Before filling with water or emptying, always unplug the appliance and allow it to cool completely. Always turn the boiler cap slowly to open the boiler. This will allow any residual steam to escape gradually.
- Use caution while emptying the appliance. Contact with hot metal parts, hot water or steam may cause burns.
- Be sure Boiler Cap is (and remains) closed during use.
- Never use cleaning solutions, perfumes, oils or other chemical substances other than tap or distilled/demineralized water in the Steam Cleaner. Use of chemicals may damage appliance and will void your warranty.
- When in use, never turn the appliance on its side.
- This appliance is not to be used for space heating purposes.

CAUTIONS

Do not use the Steam Cleaner without a Pad attached to the system.

● Save your back

No need to press hard

The steamer does the work for you



ETY INSTRUCTION

CAUTIONS

- *Care should be taken when removing the hot Boiler Cap, to ensure it is not within children's reach.*
- *Extreme care should be taken when opening the Boiler Cap as it may become hot during use and escaping steam can cause scalding.*

CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household wastes throughout the US. To prevent possible harm to the environment or human health from uncontrolled waste disposal, we recommend recycling it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please contact your local city for proper disposal locations.




INDICATIONS OF USE

This manual cannot take into account every possible use. For further information or for any problems that are not covered in detail in this manual, please contact the Service Center or retailer. **Keep this manual in a safe place for future reference. Destroy all plastic bags and packaging material, they can be a risk for children!**


NOTE: Keep the packaging for possible future transport (i.e., relocations, repairs, etc.)

Attention: the photographs and/or drawings in this document are for illustrative purposes only. Actual appliance and the accessories may vary due to product enhancement.

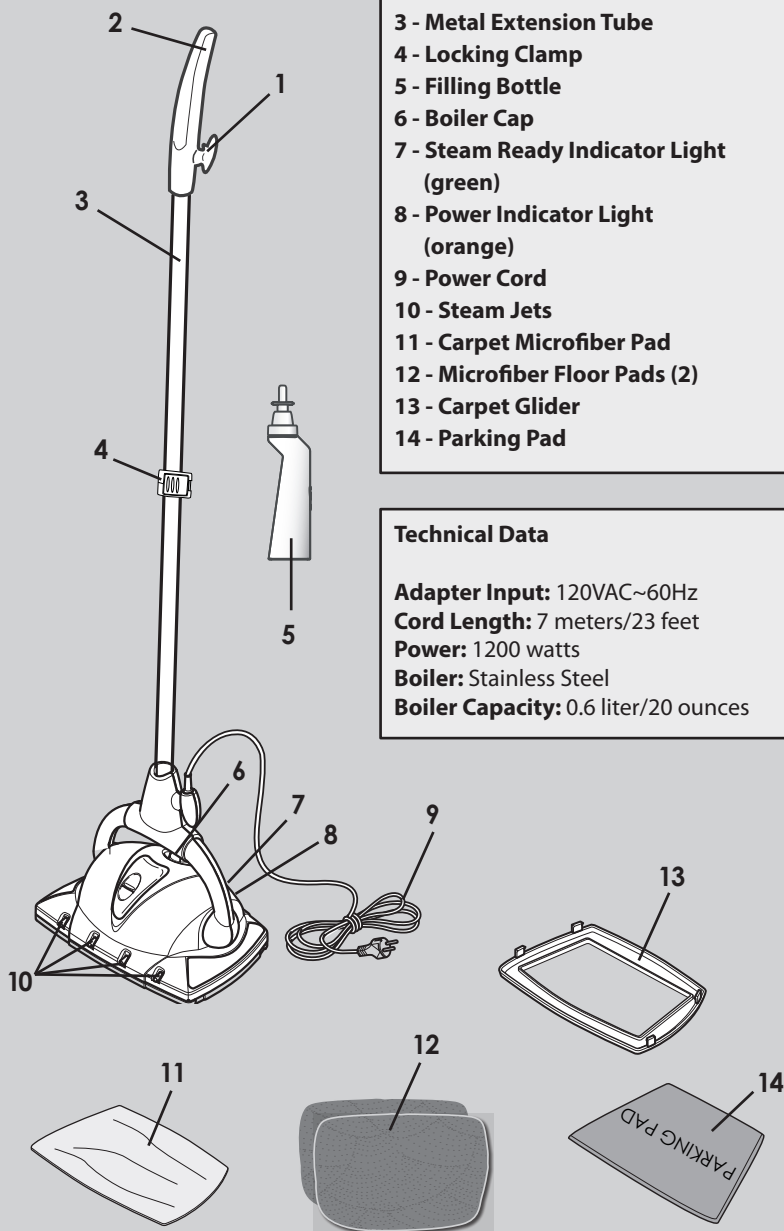

INFORMATION LABELS

Please read the warning labels and printed instructions on the steam cleaner for proper operation. Refer to the illustration below for the location of the warning labels and printed instructions.

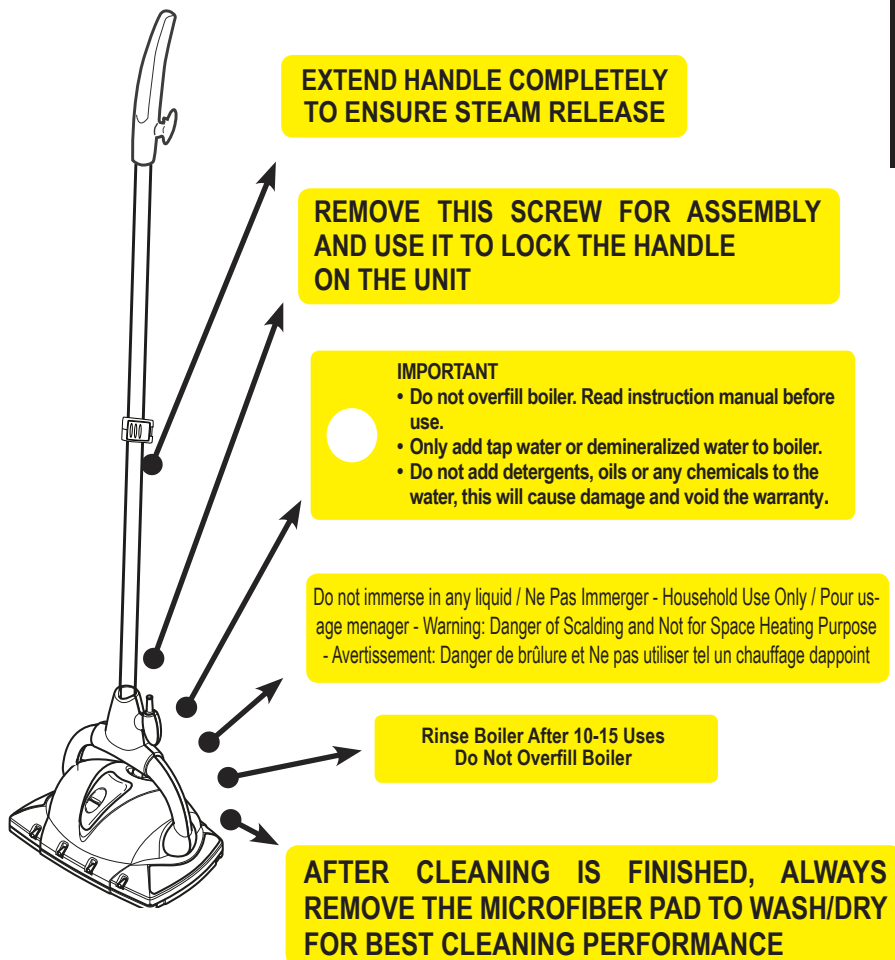

1 ASSEMBLY OF PARTS & PREPARATION OF STEAM CLEANER



Make sure all parts are in the box (see pg 6).

IMPORTANT: FOLLOW THESE INSTRUCTIONS CAREFULLY!

A. ASSEMBLE HANDLE


After removing Handle Assembly from carton:

- Pull Extension Tube apart until you see the lock opening (hole) on the Tube.

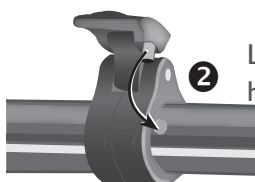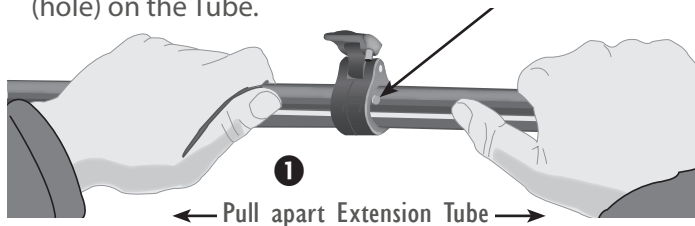

Line up the peg on Locking Clamp with the hole on Extension Tube and...

snap the Locking Clamp closed, to lock the Extension Tube in position.

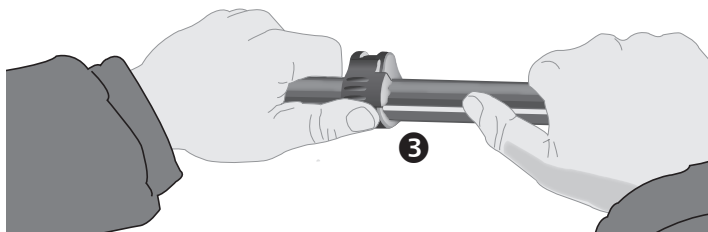

IMPORTANT

Front steam jets will only operate when Extension Tube is in the "Maximum Extension" position. **BE SURE EXTENSION TUBE IS FULLY EXTENDED AND LOCKED IN PLACE FOR OPTIMAL STEAM OPERATION.** Do not remove Handle Assembly once attached to steam cleaner.

B. ATTACH HANDLE ASSEMBLY TO STEAM CLEANER

- Before starting, remove the self-tapping screw from the bottom of Extension Tube.
- Insert the Handle Assembly into the Steam Cleaner Base. Align Arrow on Extension Tube with Arrow on Base (as shown in Fig. A).
- Once inserted, twist Handle Assembly 90° clockwise (as shown in Fig. B). Be sure Arrow on the Extension Tube is aligned with Line/Lock Icon on Base.


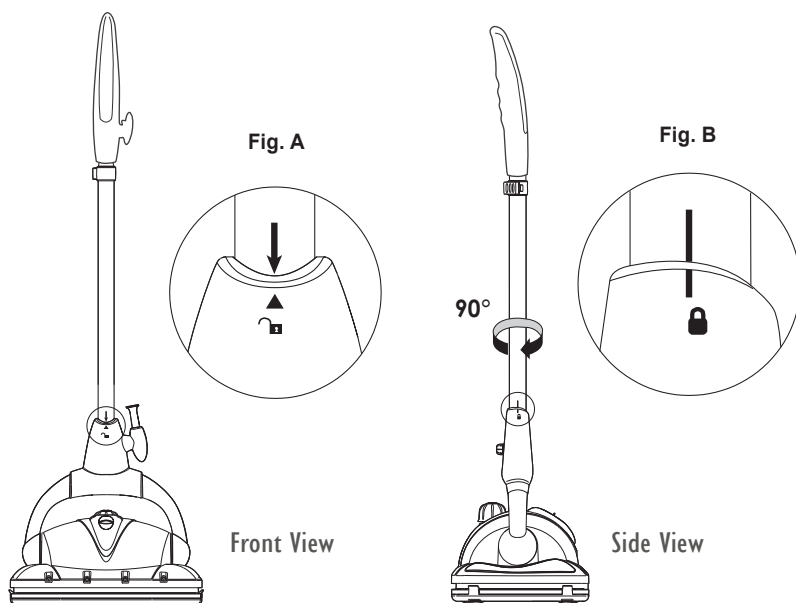


Fig. C

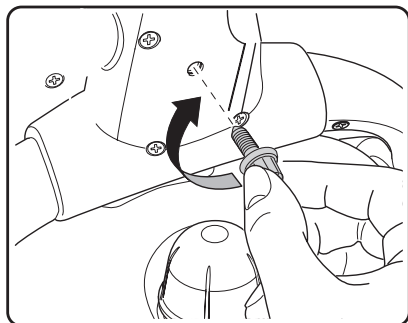

- Align the Handle Assembly screw hole with the opening in the Steam Cleaner housing. Secure the handle assembly with self-tapping screw which was removed from bottom of Extension Tube (as shown in Fig. C).


C. ATTACH MICROFIBER PAD TO STEAM CLEANER

WARNINGS! To prevent floor damage, ALWAYS attach either the Microfiber Pad or the Carpet Glider with Carpet Pad when using your Steam Cleaner. **NEVER USE WITHOUT EITHER OF THESE ATTACHMENTS AFFIXED TO THE STEAM CLEANER.**

ATTACHING MICROFIBER FLOOR PAD

MICROFIBER FLOOR PAD – Place Microfiber Floor Pad face down on the floor, wide side forward. Hold Steam Cleaner about 2" above Pad and gently place Steam Cleaner on the Pad. Firmly press down to assure Pad is adhered to the Steam Cleaner. The metal heat plate on bottom (A) provides extra heat to the floor pad to soften and remove dirt.


A - Heat Plate on bottom of Base boosts the cleaning performance.

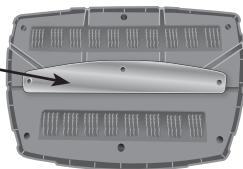

USE ON HARDWOOD FLOORS – For hardwood floors, use only on "sealed" hardwood surfaces. Move Steam Cleaner forward and backward while cleaning, carefully observing the amount of steam used, as too much water could cause damage.

ATTACHING CARPET GLIDER WITH CARPET PAD

Place Carpet Glider face up on floor. Center and place Carpet Pad on top of Carpet Glider. Hold Steam Cleaner over Carpet Glider and gently lower the Steam Cleaner onto the Glider. Make sure the 4 clips on Glider are around the outside of the Steam Cleaner Base and using hands, attach the 4 clips of the Carpet Glider to the Base.

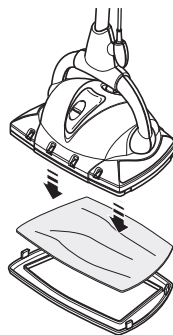

* IMPORTANT NOTE ABOUT LINOLEUM FLOORING *

Steam can cause wax to be stripped from floor and consequently damage some varieties of linoleum flooring. ALWAYS test a small, inconspicuous portion of the floor BEFORE using steam to ensure that your linoleum floor does not have this issue. For some varieties of linoleum or vinyl floors the floor Steam Cleaner is harder to push forward and back.

NOTE: See "Maintenance & Cleaning" for care and cleaning instructions of Microfiber Pads (see pg. 16).

D. FILLING BOILER WITH WATER



WARNINGS:

- Carefully read all instructions before removing Boiler Cap.
- Always unplug appliance before filling the Boiler

IMPORTANT Use ordinary tap water. Demineralized or distilled water is recommended if tap water is too hard. DO NOT add detergents, perfumes, oils, or other chemical substances to the Boiler. The product warranty will be null and void if anything other than water is added to the Boiler.

Follow these instructions to fill the Boiler:

- Make sure appliance is unplugged from the electrical outlet and has **cooled for at least 5 minutes before filling with water.**
- **Make sure Handle Assembly is in the upright "OFF" position.** Remove Boiler Cap by turning it counterclockwise.
- Keeping the handle assembly pushed forward **(A)**, place the filling bottle upside down and insert the nozzle inside the boiler opening **(B)**. Press firmly on the bottle to deactivate the locking mechanism to release water. The filling bottle allows you to fill the boiler to correct level, avoiding overfilling.
- Keep the handle assembly pushed forward **(A)** while removing the bottle.
- Replace Boiler Cap by turning it clockwise. Do not tighten Boiler Cap too much, finger tightening is sufficient to lock the steam in the Boiler. If using cold water, heating time is about 3-5 minutes. If using warm water, heating time is reduced.

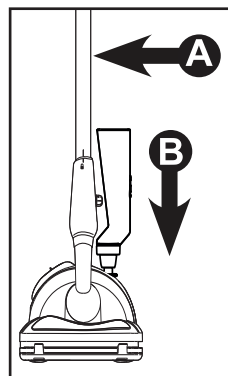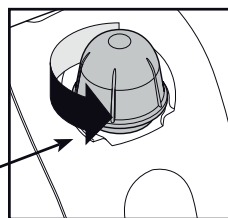

IMPORTANT

- Use the filling bottle when refilling your Boiler. The filling bottle has a built-in mechanism that prevents overfilling your Boiler. If you use a measuring cup to refill, add a maximum of 600ml (2 1/2 cups) of water when the Boiler is empty.
- If re-filling the Boiler while Steam Cleaner has been in use, be sure to allow Steam Cleaner to cool for at least 5 minutes and loosen Boiler Cap slowly to allow any excess steam to escape before completely removing Cap (See page 13, "Refilling Boiler During Use" for detailed instructions).


2 USING THE STEAM CLEANER

A. PARKING PAD

You must use the Parking Pad if the Steam Cleaner is warm or hot.


WARNINGS

The Parking Pad is provided to prevent floor damage that can result from leaving a hot Steam Cleaner resting on the same spot for too long. ALWAYS place Steam Cleaner on the Parking Pad when not in use, or while it is cooling before storage.

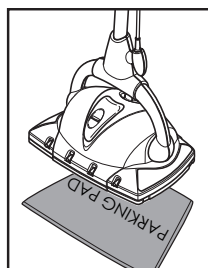

B. STARTING THE APPLIANCE

- Make sure the Boiler is filled with water and the Boiler Cap is in place.
- Insert the plug into a 3-prong grounded electrical outlet, orange Power Indicator Light will illuminate.
- Keeping the handle in the upright "Off" position, wait until the green Steam Ready Indicator Light illuminates.
- When the green Indicator light illuminates, the Steam Cleaner is ready for cleaning.

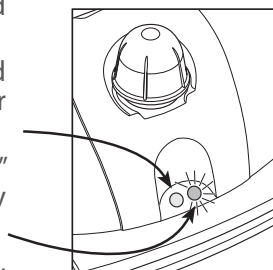


PLEASE NOTE: The green Steam Ready Indicator Light will turn on and off during use. This is normal and not a fault.

C. USING STEAM

- To emit steam from the underside of the Steam Cleaner, simply pull the Handle downwards.
- Return Handle to the upright position to stop the steam.


You will find that your Steam Cleaner can easily clean most hard surfaces and floors using the steam from the underside alone.

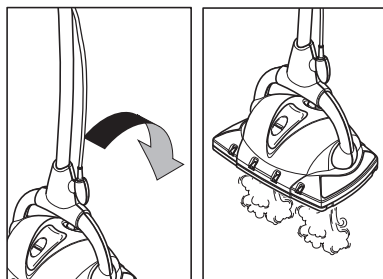

NOTE: Some condensation may be emitted when the handle is first pulled down after filling. This is normal.

C. USING STEAM (continued)

- To emit steam from the Front Jets, pull the trigger on the handle upward.

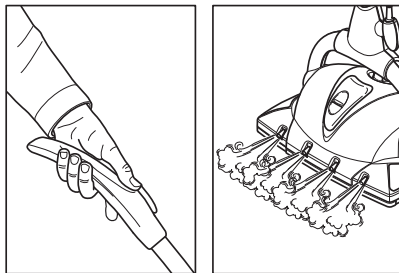

IMPORTANT

The Steam Jets are meant to be used in steam “bursts” and should never be used on a sustained basis. The Steam Jets will loosen especially difficult debris and will assist in cleaning hard to reach areas such as floor edges.

NOTE: Your Steam Cleaner will not need refilling for about 20-25 minutes of usage.

The Steam Cleaner will stop producing steam when the Boiler is empty. When this happens unplug and store unit or refill with water per instructions below.

NOTE: If the Floor or Carpet Pad becomes too wet or too dirty, replace with a clean dry pad and continue cleaning.

D. REFILLING BOILER DURING USE

When the Steam Cleaner has run out of water, there will be no more steam coming out of the unit. At this stage it is time to refill the Boiler. Follow the refilling instructions below.

IMPORTANT

Use the filling bottle when refilling your Boiler. The filling bottle has a built-in mechanism that prevents overfilling your Boiler. If you use a measuring cup to refill, add a maximum of 600ml (2 1/2 cups) of water when the Boiler is empty.


If cleaning is completed and water remains in the Boiler, the Steam Cleaner can be stored with the remaining water in the Boiler. There will be no harm done to the unit. At the next cleaning session simply fill the Boiler using the filling bottle.

WARNING: Let Steam Cleaner cool 5 minutes before opening Boiler Cap. Use care when opening Boiler Cap as it may still be hot and steam may escape, causing burns. If Boiler is still hot, water may spurt out during refilling which can also cause burns.

- **Unplug the appliance from the electrical outlet.**
- Place Handle in the “ON” position to release any residual steam and pressure from the Boiler.
- Slowly turn Boiler Cap counterclockwise. This will allow remaining steam to slowly escape.
- **Make sure Steam Cleaner has cooled 5 minutes before refilling with water.**

The product warranty will be invalidate if anything other than water is added to the Boiler.

- **Be sure Handle Assembly is in the upright “OFF” position.** Remove Boiler Cap by turning it counterclockwise.
- Keeping the handle assembly pushed forward **(A)**, place the filling bottle upside down and insert the nozzle inside the boiler opening **(B)**. Press firmly on the bottle to deactivate the locking mechanism to release water. The filling bottle allows you to fill the boiler to correct level, avoiding overfilling.

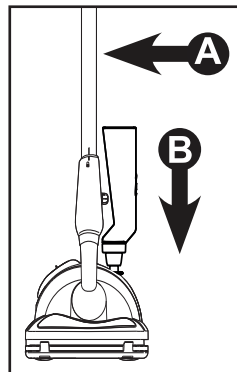

- Keep the handle assembly pushed forward **(A)** while removing the bottle.
- Replace Boiler Cap by turning it clockwise. Do not tighten Boiler Cap too much, finger tightening is sufficient to lock the steam in the Boiler. If you use cold water, the heating time is about 3-5 minutes. If you use hot water, the heating time is reduced.
- Insert the plug into electrical outlet. Wait for green Steam Ready Indicator Light to turn on. Steam Cleaner is ready to use once again.

REMINDERS

- Always use ordinary tap water.
- If tap water is too hard, use distilled or demineralized water to avoid the risk of mineral deposits and sediment from forming.
- Do not add detergents, perfumes, oils or other chemical substances to the Boiler. This will damage the Steam Cleaner and void the warranty.
- The green Steam Ready Indicator Light will turn on and off during use. This is normal and not a fault.

IMPORTANT

Do not overfill the Boiler as excess water will be flushed out of the Boiler before dry steam will emit.

3 MAINTENANCE INSTRUCTIONS

We recommend you periodically clean the Steam Cleaner to prevent the accumulation of calcium, mineral deposits, and other sediment caused by the use of tap water. After every 10-15 refills, fill the Boiler three-quarters full of hot tap water, shake several times and empty out the water into a sink.

Repeat several times to ensure that the Boiler is flushed of any calcium or mineral deposits. Wipe the Steam Cleaner with a damp cloth and dry.

NEVER HOLD THE STEAM CLEANER UNDER THE TAP TO FILL. Use the filling bottle provided to fill the Boiler.

If distilled or demineralized water is regularly used in the Steam Cleaner, cleaning of the Boiler can be done less frequently. In some areas tap water is very hard, it is recommended that the Boiler is cleaned more frequently if hard water is used.

The cleaning of the Boiler and Steam Cleaner is the sole responsibility of the appliance owner. Calcium, mineral deposits, and other sediments left to build up in the Steam Cleaner causing it to fail and/or the steam pathways in the Steam Cleaner to block, is not covered by the product warranty. Users must follow the maintenance instructions above.

If the Steam Cleaner and Boiler is not cleaned according to the instructions above and the product fails and/or the steam pathways are blocked, the appliance owner should send the product for servicing by contacting the Customer Support Line.

The Steam Cleaner is intended for domestic household use only. It is not intended for commercial use. Any use other than for domestic household purposes will void the product warranty.

4

MICROFIBER PAD CARE & CLEANING

Your Microfiber Pads are designed for hundreds of uses. Clean Pads regularly, either by hand (using mild soap and warm water) or in your washing machine on a delicate cycle, cool water. Never use fabric softener or bleach. We recommend letting Pads air dry to maintain maximum long term effectiveness. Replacement pads can be purchased from our website www.euroflexproducts.com.

Microfiber washing instructions – ULTRA MICROFIBER

MICROFIBER FLOOR PAD	CARPET PAD
90% Polyester /10% Polyamide Hand wash only Tumble dry low or air dry No bleach / No fabric softener	90% Polyester / 10% Polyamide Hand wash only Tumble dry low or air dry No bleach / No fabric softener

5 TROUBLESHOOTING

ISSUES	POSSIBLE CAUSES	SOLUTIONS
Steam is not coming out of the Steam Nozzles	Improper Handle Assembly	Call Customer Service to receive instructions to correct the problem
The Hard Surface Floor Pad is not adhering to Steam Cleaner	Not enough pressure was applied when attaching Pad	Position Steam Cleaner about 2" above Pad and FIRM- LY press it down onto the Pad
	Floor Pad requires replacing due to age of the Floor Pad	Replacement Floor Pads can be purchased at most electrical appliance retail outlets
The Cleaning Pads are getting soaked (too wet). Why?	Boiler is overfilled	Let Steam Cleaner run until excess water ceases. Remove some water from Boiler once the Boiler has cooled down completely
	Green "Steam Ready Indicator Light" is not illuminated	Wait for green "Steam Ready Indicator Light" to illuminate
The steam seems to be making my floor too wet	Front Steam Jets are being used too frequently	Only use Front Steam Jets in short bursts for cleaning tougher dirt or to clean hard to reach areas
	The Cleaning Pad is too wet (saturated with moisture)	Replace the wet Pad with a dry, clean Pad and resume cleaning

IMPORTANT QUESTION:

Q: Do I always need to use a Microfiber Pad when cleaning with my Steam Cleaner?

A. YES! It is critically important to ALWAYS use your Microfiber Pads. The Steam Cleaner should NEVER be used without either a Hard Surface Floor Pad or Carpet Glider with Carpet Pad.

Q: Why is my M2R Steam Cleaner sometimes hard to glide across my floors?

A. If the microfiber floor pad does not have enough moisture, it can be more difficult to push across your floor. The moisture in the pad allows your steam cleaner to glide easier across the floor while keeping your pad hot to help loosen and remove dirt & debris while cleaning. The microfiber pad needs both moisture and heat to achieve the best cleaning results.



Euroflex USA
5940 S Rainbow Blvd., #400
PMB 91217
Las Vegas, Nevada 89118-2507

Email: hello@euroflexproducts.com
Website: euroflexproducts.com