

Akitas[®]

C10

Powered by

 


WESSEL-WERK *FLoor Tehnology*
Better Perfloormance



Vacuum Cleaner

EN

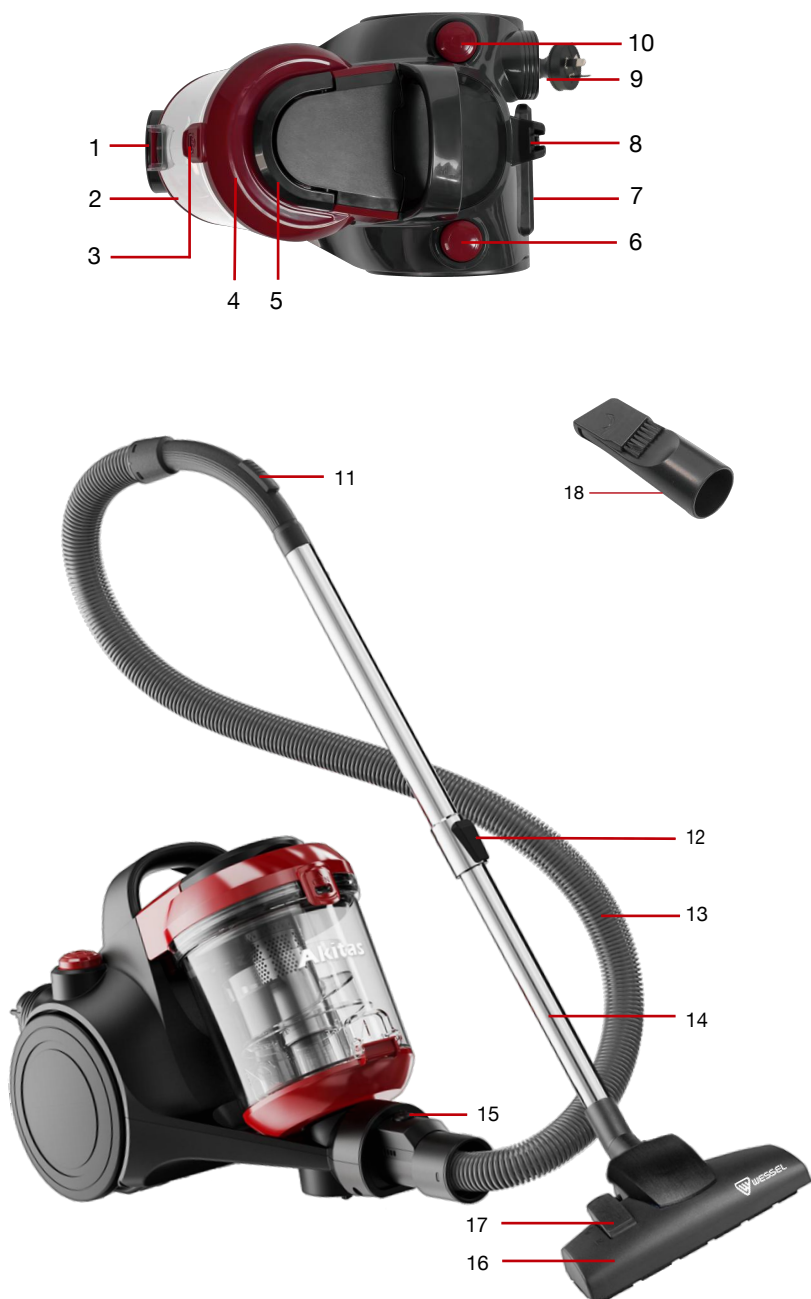

Congratulations on the purchase of your new **Akitas C10**. There are many useful features built into your stickvac. We recommend that you carefully read this instruction manual for the best results.

Features:

- | | |
|-------------------------------|---------------------------------------|
| 1. Hose inlet | 11. Air relief valve |
| 2. Dust container | 12. Extension release switch |
| 3. Lid release button | 13. Flexible hose |
| 4. Pre filter kit | 14. Extension tube |
| 5. Dust container handle | 15. Hose release switch |
| 6. On/off button | 16. Wessel-Werk RD278
2-in-1 brush |
| 7. HEPA filter | 17. Floor type selector
switch |
| 8. Storage hook | |
| 9. Power cord with power plug | |
| 10. Cable rewind button | |

Specifications:

Power: 1400W

Volt: 220V-240V /50Hz

Dust Bin Capacity: 2.5L

Power Cord: 6 Meters

Hose: 1.7M Meter

Washable HEPA Filter

Accessories:

18. Crevice tools

Before You Begin

Safety Precautions Warnings

Read these instructions carefully and retain them for future use.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not point the hose, the tube or any other accessory at the eyes or ears not put it in your mouth. Do not use on pets.

PRECAUTIONARY MEASURES:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never use the vacuum cleaner without filter inserts. This could damage the motor and shorten the life of the product.
- Only use this product for its intended use.
- To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.
- Take extra care when working on stairs.
- Lay out the cord in such a way that no unintentional pulling or tripping over is possible. Keep the appliance and its cord out of reach of children.
- If an extension cord is used, its capacity needs to be suitable for the power consumed by the product.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.
- Do not pull the power plug out of the electrical outlet by the power cord and do not wrap the power cord around the product
- Disconnect the power plug from the electrical outlet when not in use, before any maintenance and before cleaning.
- Never operate the appliance with any air openings blocked. Keep ventilation openings free from the accumulation of lint, dust, and loose cloth.

Intended Use

- This product is only intended for vacuuming of dust, lint and dirt on soft and hard surfaces.
- Do not use the product for vacuuming ashes, large objects, sharp objects, e.g. glass, or to suck up liquids or flammable substances.
- This product is intended for household use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

Before First Use

- Carefully remove all packaging materials and retain for future use.
- Check for transport damages.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.
- **Risk of suffocation!** Keep any packaging materials away from children-these materials are a potential source of danger, e.g. suffocation.

Assembly

IMPORTANT! Always ensure that the cleaner is turned off before fitting or removing accessories.

ASSEMBLY




Step 1:

Insert the flexible hose (15) into the hose intake (1). It should snap into place.



Step 2:

Insert the narrow end of the flexible hose (11) into the extension tube (14). It should snap into place.

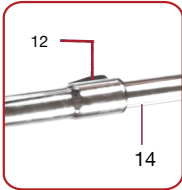

Step 3:

Press the tube release switch (12) and extend the length of the extension tube (14).




Step 4:

Connect the other end of the extension tube (14) to the 2-in-1 brush nozzle (16) (or other accessory (18)).

Before You Begin & Assembly

Instructions For Use

Connecting to an electrical outlet:

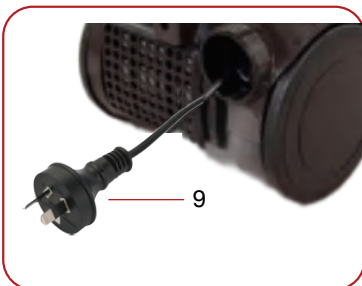

1. Pull out the power cord (9).
 2. Connect the power plug to a suitable electrical outlet.
- * Do not extend the power cord further than the yellow mark on the cord.**

Turning on/off:




1. To turn on, press the on/off button (6).
2. To turn off, press the on/off button (6) again.
3. After use, unplug the power plug and press the cable winder switch (10) to rewind the power cable (9).

*** Guide the power cord with the other hand to ensure that the cord does not whip and cause damage.**



*** You can set the suction power of the vacuum by sliding the suction regulator (11).**

Wessel-Werk RD278 2-in-1 brush nozzle :

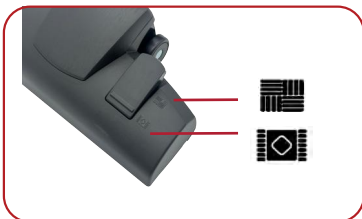

The Floor Mode

For smooth, hard surfaces such as floors, stairs, wood, ceramic, tiles and marble.



The Carpet Mode

For soft surfaces such as carpets and rugs.

Maintenance

IMPORTANT! Always ensure that the cleaner is turned off and then disconnect the plug from the power supply before performing any maintenance. During cleaning, do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

Emptying the dust container (2) :

1. Lift the dust container handle (5) and remove the dust container (2).
2. Hold the dust container (2) above a rubbish bin.
3. Press the release button to open the dust container (2) and empty it.
4. After emptying, close the lid.
5. Place the dust container (2) back into its original position. It should snap into place.



Replacing HEPA filter (7):



1. Remove the air outlet grid by pushing the grid lock to the left.
2. Remove the old HEPA filter (7) by pushing down the lock on the top of the filter.
3. Install a new HEPA filter and the air outlet grid in a reverse order.

It is recommended to replace the HEPA filter every 6 months or when it becomes visibly dirty for optimal performance.

Cleaning the pre filter kit (4) :

1. Pull up the lid release button (3) to open the top lid of the dust container (2).
2. Take out the pre filter kit (4) and the foam inlay. Rinse them under running water.
3. Clean the dust container (2) and the two cylinders with a damp cloth.
4. Allow the pre filter kit (4) and the foam inlay to dry completely before reinstalling into the dust container (2).

Replace the pre filter kit (4) if it can no longer be cleaned properly or if it is damaged.



General cleaning advice:

1. To clean, wipe with a soft, slightly moist cloth
2. Dry the product after cleaning.
3. Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.
4. Store in a cool and dry place away from children and pets, ideally in original packaging.
5. Avoid any vibrations and shocks.

Troubleshooting

PROBLEMS AND SOLUTIONS

If you come across a problem, please use the checklist of troubleshooting tips before contacting Akitas Customer Care:

Problem	Possible problem	What to do
Vacuum fails to turn on.	1. The vacuum might not be plugged in properly or the fuse has tripped.	1. Ensure the plug is in the socket properly and switched on. 2. Check the fuse on the mains board. If it has tripped, reset it.
Low suction or poor pickup.	1. Bin is full. 2. Filters are blocked. 3. The vacuum is set at the wrong height for the floor type. 4. Blockage in the hose. 5. Check the dust canister is fitted correctly to the vacuum cleaner, and the filter lid is closed securely.	1. Empty the bin. Refer to the 'empty the dust container' section in this manual. 2. Check and clean the filters following the guidance in the 'How to...remove and clean circular sponge filters and outlet HEPA filter'. 3. Check which setting the suction regulator is on and adjust if necessary. 4. Check the hose.

The vacuum is making an unusual sound and hissing.	1. The airflow is restricted.	1. Check for blockages and clear. Clean the filters. Some carpet types may seal tightly to the floor tool. Open the slider on the hose handle to reduce the suction power if needed.
The vacuum is difficult to push.	1. The vacuum is set to the wrong height for the floor type.	1. Change to the correct setting for your floor type. 2. Open the slider on the hose handle to reduce the suction power if needed.

Akitas CUSTOMER CARE

Thank you for your interest and purchase of Akitas Vacuum Cleaner! In the event of service or advice being needed, please contact Chelsea Company Limited

Our Email: service@akitasclean.com

Our Website: www.akitasclean.com

DISPOSAL INFORMATION

Akitas products are made from high grade recyclable materials. Please dispose of this product responsibly and recycle where possible.

*Please note that not all parts are recyclable. Recycling of parts is subject to the capabilities of 3rd party suppliers.

Akitas C10

Bagless Cylinder Vacuum Cleaner

Conditions of warranty

Your Akitas cleaner, in the case of domestic use, has a **ONE-YEAR** parts and labor warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement. This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid **ONLY** in the country where the cleaner was purchased.

WHAT Akitas WILL DO

Akitas will, at its option, repair or replace a defective vacuum or vacuum part that is covered by this warranty. Repairs may be performed using new or refurbished parts that meet or exceed Akitas specifications for new parts and the replaced parts shall be owned by Akitas. If Akitas decides to repair or replace the cleaner, it will do so at its own cost. If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner will be chargeable. Any transportation costs involved in the repair of defective parts shall be borne by the claimant. The repair or replacement of the cleaner under this warranty does not extend the original period of warranty. Chelsea Company Limited ("Akitas") reserves the right to final interpretation of the repair.

WHAT IS COVERED

Your Akitas guarantee covers:

The repair or replacement of your Akitas appliance if your Akitas appliance is found to be defective due to faulty materials, workmanship or function within 1 years of purchase or delivery (if any part is no longer

available or out of manufacture, Akitas will replace it with a functional replacement part).

This Akitas guarantee will **ONLY** be valid if the appliance is used in the country in which it was sold.

WHAT IS NOT COVERED

Under your Akitas guarantee, Akitas shall not be liable for costs of repair or replacement of a product incurred as a result of:

Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Akitas appliance which is not in accordance with this Akitas Operating Manual.

Use of the Akitas appliance for anything other than normal domestic purposes in the country of purchase.

Use of parts not assembled or installed in accordance with the instructions of Akitas.

Use of parts and accessories other than those produced or recommended by Akitas. Repairs or alterations carried out by parties other than Akitas or its authorised agents.

Damage from external sources such as transit, weather, electrical outages or power surges. Failures caused by circumstances outside Akitas's control.

Serious Blockages caused motor damage.

Normal wear and tear (e.g. fuse, brush bar etc.).

Use of this appliance on rubble, ash, plaster. Reduction in battery discharge time due to battery age or use (cordless machines only).

If your Akitas guarantee does not apply, you may have statutory rights and remedies available to you as a consumer. If you are in any doubt as to what is covered by your Akitas guarantee, please email the Akitas Customer Care.

Manufacturer
Chelsea Company Limited
Corylus, Burtons Way, Chalfont St Giles,
HP8 4BP, UK
info@akitasclean.com

Importer
Opal E Commerce Australia Pty Ltd
45-47 Ventura Place, Dandenong South,
VIC 3175, Australia
ABN52145825109

Akitas®

