

Akitas X7

Spot cleaner

Conditions of warranty

Your Akitas Cleaner Warranty

In the case of domestic use, your Akitas cleaner comes with a **ONE-YEAR** parts and labor warranty against product defects and failures when used in accordance with this warranty statement.

- This warranty starts from the original date of purchase and is **non-transferable**.
- Please retain your original **proof of purchase** for any warranty claims.
- This warranty is valid **ONLY** in the country where the cleaner was purchased.

WHAT Akitas WILL DO

Akitas will, at its option, repair or replace a defective vacuum or vacuum part covered by this warranty. Repairs may be performed using new or refurbished parts that meet or exceed Akitas' specifications for new parts. The replaced parts will become the property of Akitas.

If Akitas decides to repair or replace the cleaner, it will do so at its own cost. However:

- If proof of purchase cannot be provided at the time of a warranty claim, any work carried out will be chargeable.
- Any transportation costs related to the repair of defective parts must be borne by the claimant.
- The repair or replacement of the cleaner under this warranty does not extend the original period of warranty.

Chelsea Company Limited ("Akitas") reserves the right to final interpretation of the repair.

WHAT IS COVERED

Your Akitas warranty covers:

- The repair or replacement of your Akitas appliance if found defective due to faulty materials, workmanship, or function within 1 years of purchase or delivery
- If a part is no longer available or out of manufacture, Akitas will replace it with a functional replacement part.
- This warranty is valid **ONLY** if the appliance is used in the country in which it was sold.

WHAT IS NOT COVERED

Under your Akitas warranty, the following are not covered:

- Accidental damage, negligent use, misuse, neglect, or careless handling not in accordance with the Akitas Operating Manual.
- Non-domestic use or use outside the country of purchase.
- Improper assembly or installation of parts not following Akitas instructions.
- Use of unauthorized parts or accessories not produced or recommended by Akitas.
- Repairs or alterations performed by unauthorized third parties.
- External damage caused by transit, weather, electrical outages, or power surges.
- Blockages that cause motor damage.
- Normal wear and tear, such as fuses or brush bars.
- Use on rubble, ash, or plaster.
- Reduction in battery discharge time due to age or usage (for cordless machines only).

If your Akitas warranty does not apply, you may still have statutory rights as a consumer.

For any doubts regarding coverage, please email Akitas Customer Care.

 
Akitas®

Akitas®

X7 Spot Cleaner

Removes spots & stains

600W carpet & upholstery cleaner

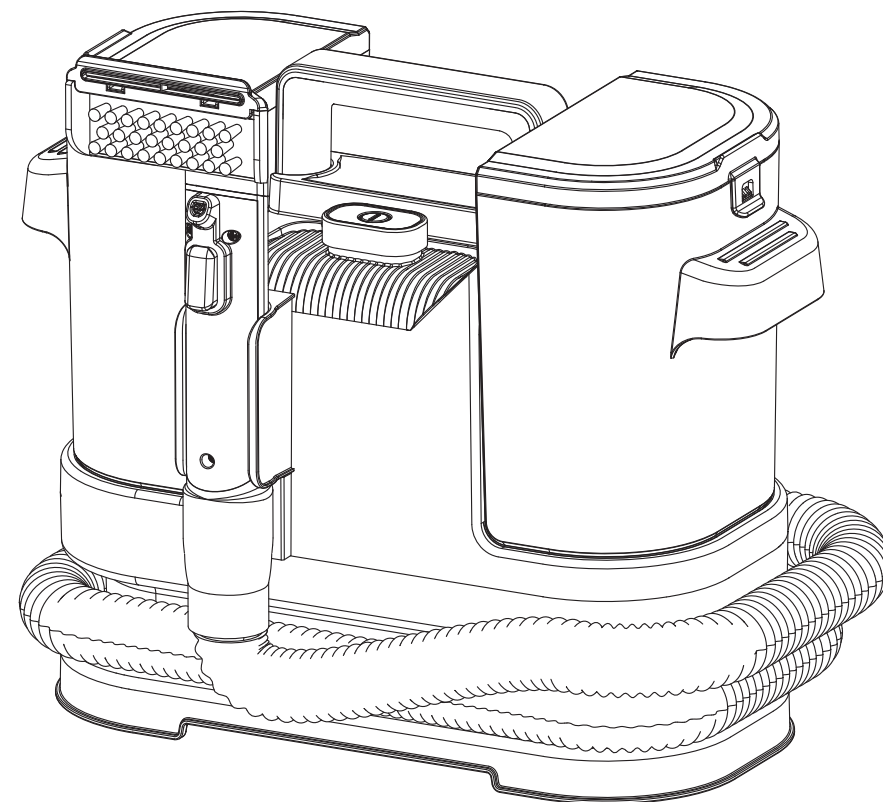

Chelsea Company Limited

Corylus, Burtons Way
Chalfont St Giles, HP8 4BP, UK
Version 2.1 (19-06-2025)



AU EN

Akitas X7

Features:

1. Dirty water tank lid
2. Handle
3. On/off button
4. Water spray button
5. Dirty water tank
6. Hose hook
7. Hose
8. Hose
9. Air outlet
10. Clean water tank lid
11. Clean water tank
12. Power cord
13. Maximum water level

Accessories:


14. Pet cleaning brush
15. Cleaning nozzle
16. Self-cleaning cap

Specifications:

Voltage: 220-240V~50/60Hz
 Wattage: 600W
 Suction: 14kpa
 Noise level: 80dBA Max
 Dirty water tank: 1L
 Clean water tank: 1.8L
 Cord length: 5m
 Hose length: 1.5 m
 Net weight: 3.4kg

-  Class II double insulated
-  Indoor use only
-  Read Instructions before use

 IPX4

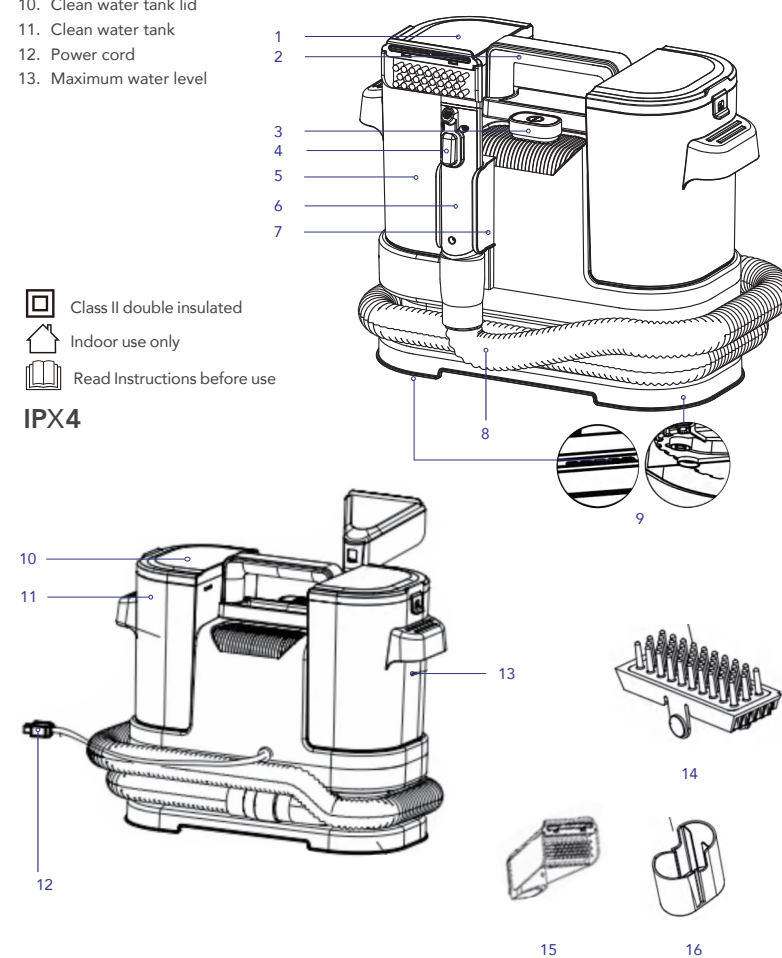

Features

Before You Begin

Congratulations on the purchase of your new Akitas X7 spot cleaner. There are many useful features built into your spot cleaner.

We recommend that you carefully read this instruction manual so you can make the most of all the features this machine has to offer.

Please read this manual before operating cleaner

This will ensure you obtain full benefit from your new spot cleaner. Keep this instruction manual in a handy place for future reference.

Important

Always switch off the cleaner and remove the plug from the electricity power supply before cleaning your appliance when attempting any maintenance task. The cleaner must only be connected to an AC supply at the voltage shown on the rating plate. This cleaner should only be used for its intended purpose as described in these instructions.

IMPORTANT! Do not operate the cleaner over the power cable.

Precautionary measures:



1. Do not operate the spot cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the power plug into the power supply, make sure your hands are dry.



3. When you want to pull the plug from the wall, do not use the power cable, gently pull the plug from the power socket.



BEFORE YOU CLEAN, TEST FIRST

Before cleaning the carpet, test for colour fastness.

Dampen a white cloth with solution. Test a small area of carpet in a closet. Gently rub the cloth over the carpet. Check each colour for colour bleeding. If the cloth remains clean, it should be safe to clean the carpet.

WARNING! To reduce the risk of fire, electric shock or injury when using an electrical appliance, basic precautions should always be followed, including the following:

1. This appliance is **not** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they **do not** play with the appliance.
3. Always check the power cord before use. The power cord and plug should be in a good condition and must **not** be damaged or defective. If the power cord is damaged it must be replaced by an authorised service agent or similarly qualified persons.
4. Carpets should be dry vacuumed thoroughly before washing. Use a vacuum cleaner with a power brush for best results.
5. If using an extension cord please make sure that it is of an approved type and that it is fully extended. Failure to do so could cause your cleaner to overheat and damage it.
6. **Do not** run the appliance over the power cable and power socket on the floor.
7. **Do not** place cleaner on stairs or furniture, as it may result in injury or damage. **Do not** handle the plug or spot cleaner with wet hands.
8. **Do not** put any objects into the openings or operate with the openings blocked. Keep them free of anything that may reduce air flow.
9. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
10. **Do not** use this cleaner and accessories on hard floors. Using this machine on hard floors may scratch or damage your floor.
11. **Do not** use the spot cleaner on any glowing, burning or smoking particles.
12. **Do not** use without the clean water tank and dirty water tank in place.

13. Turn off all controls before unplugging.
14. **Do not** store cleaner with solution in tanks.
15. **Do not** use to pick up flammable or combustible liquids such as petrol or use in areas where they may be present.
16. Recommended to use the spot cleaning solution provided by Akitas.
17. **Do not** use any high-foaming solutions as an excessive amount of foam impairs the functioning of the spot cleaner. If unsuitable cleaning solutions are used, this will void warranty.
18. **Do not** pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around edges or corners.
19. To prevent electrical shock, **do not** immerse the appliance, power cord or power plug into water or any other liquids.
20. **Never** clean any of the electrical parts, especially the electrical connections with water or liquid cleaners.
21. Never attempt to make any modifications to the spot cleaner.
22. Indoor use only.
23. Always store the appliance indoors, in a cool, dry place.
24. **Do not** use the appliance if it is damaged or breaks down. Check the electrical components regularly for defects.
25. If the Spot Cleaner is leaking from the base, turn off the machine, disconnect the power.

CAUTION!

The hose handle contains electrical connection. The cleaning hose assembly is **not** a serviceable part. Please return the product to Akitas store if the cleaning head is faulty.

FAULTS!

Consult the trouble shooting guide in this manual if your spot cleaner fails to operate properly.

Do not continue to use this appliance if it appears to be faulty or the supply cord is damaged.

IMPORTANT!

Do not use the spot cleaner as a dry vacuum.

CHECK FOR COLOUR FASTNESS!

Before cleaning the carpet, test for colour fastness. Dampen a white cloth with solution. Test a small area of carpet in a closet. Gently rub the cloth over the carpet. Check each colour for colour bleeding. If the cloth remains clean, it should be safe to clean the carpet.

NOTE!

 
1. For heavily soiled areas, additional applications may be necessary.
2. For optimal cleaning, allow plenty of time for the cleaned area to dry thoroughly.
3. After carpet is thoroughly dry, vacuum the carpet using a vacuum cleaner with a powerbrush.
4. To reduce the risk of a leaking condition, do not store machine where freezing may occur. Damage to internal components may result.
5. Use extra care when cleaning on stairs.
6. Do not overwet surface. Use only on surface moistened by the cleaning process.

Assembly

Important! Always switch off the cleaner and remove the plug from the electricity power supply before cleaning your appliance when attempting any maintenance task.



1. Insert the brush head in alignment and hear "click!" sound, the installation is complete.

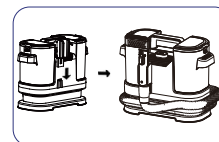

2. Attach the hose hook to the body and place the brush.

 
Instructions For Use

WARNING! Do not use hot or boiling water to fill the water tank. Only refill the water tank with cold tap water.


Important! Always switch off the cleaner and remove the plug from the electricity power supply before cleaning your appliance when attempting any maintenance task.



1. Remove the clean water bucket from the machine.

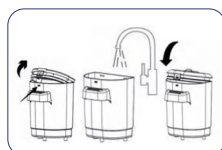

 
2. Open the screw cap and fill with clean water. The maximum water capacity is about 1L.

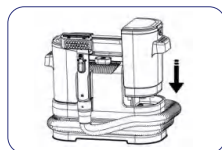


3. Insert the clean water bucket into the machine until you hear a "click," confirming successful installation.



 
4. Insert the handle into the tool.

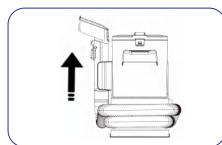

 5. Fix the hose and power cord before handling.

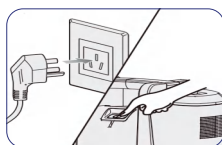

 6. Plug it in, turn on the power (start).

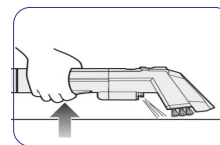


7. Turn on the machine by pressing power button. Hold cleaning tool approximately 2.5cm above soiled surface. Press spray trigger to apply water or cleaning solution to soiled area.


Note:

For thorough cleaning, spray additional solution while brush and suction are in contact with surface.

 For optimal results, apply spot cleaning solutions on the stain.

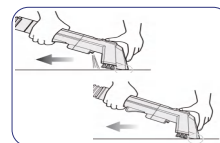

 8. Apply downward pressure on cleaning tool and pull it toward you. The suction will remove the dirt and dirty water. Repeat this step as often as necessary to remove as much liquid/moisture as possible.

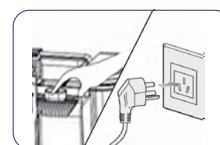

9. Turn off the power (stop), unplug it. Pour away clean water and sewage, and clean the sewage bucket.

Accessories


Accessory	Use	
Cleaning nozzle	Spray, scrub and suction to remove stains, spots and stubborn dirt in tricky areas.	
Pet cleaning brush	For cleaning pet paws or small stains on their body.	
Self-cleaning cap	Makes light work of removing dirt from inlet of hose.	

Detergent



1. Fill the clean water tank with water and the accompanying Akitas cleaning solution. For the amount and usage of the cleaning solution please read the manual carefully and use it correctly

 Note: Do not put the cleaning solvent in the clean water bucket.

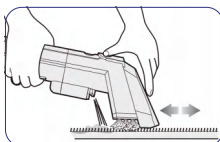

2. Press spray trigger to apply water or cleaning solution to soiled area.

Recommend using the Akitas low-foam cleaning solution for optimal results.

Detergent	Recommended	Not appropriate
	• Strong alkaline ionized water • Baking soda • Citric acid • Hypochlorous acid • Weak acid electrolytic water Such as detergent producing less foam	• Neutral detergent for kitchen use • Strongly alkaline detergent • Strongly acidic detergent When using a detergent with a lot of foam, the foam might get inside the cleaner.
Attention • Do confirm that wash solvent does not cause damage to carpet before use. • When using detergent, first test it on the edge of the fabric being cleaned to make sure that there is no discoloration. • Do not use diluent, aniline, chloroform, and flammable solvents. • Do not spray any liquids such as insecticides, hair care products, or lubricating oil. • Do not use the product to vacuum flammable or combustible substances. (such as kerosene, gasoline, thinner, copy product toner, etc.) • Do not use the product to vacuum oil, smoke, steam or dry dust. • Do not operate this unit near combustible substances such as lit cigarettes or incense sticks, doing so may increase the risk of fire. • Only water (clean tap or recommended Detergent) that is 40°C or cooler should be put into the clean water tank. • For the amount and usage of the cleaning solvent, please read the manual carefully and use it correctly.		

 
Maintenance

Emptying the Dirty Water Tank


Always switch the cleaner off and remove the plug from the electricity supply before emptying the any bucket or when not in use, or when attempting any maintenance task.



1. Pull the dirty water tank vertically upward to remove it.

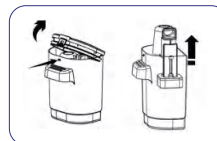

 2. Open the dirty water tank cover. Remove the buoy support if needs to clean inside.

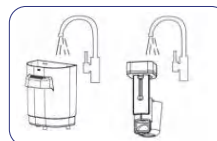

3. Clean the tank and dry it in a cool, shaded place before reinstalling. Clean the buoy support and dry it in a cool, shaded place before reinstalling.



4. Place the dry buoy back inside the tank. Reinstall the tank vertically downward. When you hear a "click" sound, the installation is complete.

Attention:

- Stop running and unplug it before maintenance.
- Do not water the machine to avoid electric shock.
- Do not use the detergent, diluent, benzene and other chemical agents to clean the machine.

Routine Maintenance



1. Fill the clean water tank with sufficient water, assemble the self-cleaning head, and ensure the power is connected.



2. Press and hold the water control button to start flushing the hose for self-cleaning.

Brush Head Removal



1. Press and hold the release button.
Pull outward to remove the brush head.

 


2. Align the brush head and insert it.
When you hear a "click" sound, the installation is complete.

Brush Head Installation



1. Press and hold the release button.
Pull outward to remove the brush head module.

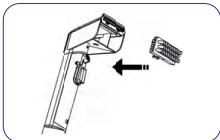

2. Align the new brush head module and insert it.
When you hear a "click" sound, the installation is complete.



3. Silicone brush heads are ideal for pet cleaning.



4. Hard hair brush heads are suitable for fabric cleaning.

Spare Parts

Part	Part Number
Pet cleaning brush	9358199003366
Cleaning nozzle	9358199003359
Self-cleaning cap	9358199003373
Clean water tank assembly	9358199003328
Dirty water tank assembly	9358199003335
Sponge filter	9358199003342

Troubleshooting

Problems and Solutions

If you come across a problem, please use this checklist and confirm the following points before contacting Akitas Customer Care.



**WARNING : The spot cleaner contains electrical connections.
The spot cleaner is not a serviceable part.**

Fault	Solution
Reduced spray or no spray	Refill bucket with tap water. Turn power OFF; Remove and reset tank. Hold end of hose below water level in bucket to prime.
Loss of suction power	Pick up both tanks and reset them so they fit properly on the unit. Empty dirty water tank. Clean up the dirty and use it again. Check the hose for cracks, breaks and clogs. Clean or replace the sponge.

Akitas CUSTOMER CARE

Thank you for your interest and purchase of Akitas Vacuum Cleaner! In the event of service or advice being needed, please contact Chelsea Company Limited.

Our Email: service@akitasclean.com

Our Website: www.akitasclean.com